## FABRY-PEROT OPEN RESONATOR FOR LOW-LOSS LIQUIDS (15-50 GHz)



QWED offers a **Fabry-Perot open resonator** (FPOR) for automated broadband and accurate resonant measurements of electromagnetic properties of low-loss liquids in the **15-50 GHz** frequency range.

The FPOR system is equipped with specialized **software** controlling the measurement process and extracting the dielectric constant (Dk) and dissipation factor (Df) of the liquid under test (LUT) from the measured changes of the resonance frequency and quality factor, respectively. The measurement setup consists of a PC connected to the FPOR and to measurement equipment (VNA).

The FPOR operates at consecutive  $TEM_{0,0,q}$  Gaussian odd modes spaced every **1.5 GHz**. The LUT is inserted into the FPOR in a specialized liquid **container** made of fused silica wafers.


0	( ) Fabry-Perot dielectric me	isurement setup							-		×
	Fie Setting: Help										
and the second se	Connect to VNA and motor drive		Top container wafer thickness (um) / Dk:	Bottom	Bottom container wafer thickness (un) / Dk:		User: User Sub-band:				
and the second	Pabry-Perot type:	O Double-Concave Dielectrics	Average: 29		Averag			Maxinum available (cor	ntact Vendor for e	extension)	~
		Double-Concave Liquids Plano-Concave Dielectrics	Mins		Min:			Modes to be measured:			
		Plano-Concave Dielectrics  Plano-Concave Conductors	Max:		Max			TEM0015 @ 11.7GHz			^
		Reset		806	Dk	3.807		TEM0017 @ 13.2GHz TEM0019 @ 14.7GHz			
	Reset motor position: Show uncertainty bars	Reset	un. [3.		Dir.	3,807		TEM0021 @ 16.2GHz TEM0023 @ 17.7GHz			
	Construction of the second secon										
								TEM0025 @ 19.2GHz	3Hz		
	Estimated sample delectric constant  Results Delectric constant Loss tangent Conductivity Acadication status [S21] Plot							TEM0029 @ 22.20			
	Results Dielectric constan	t Loss tangent Conductivity	Application st	atus (S21) Piot				TEM0033 @ 25.20	iHz		
							^	TEM0035 @ 26.70			
								TEM0037 @ 28.20			
								TEM0041 @ 31.20			
D . DOUBLE STATE								TEM0043 @ 32.70			
- All and								TEM0047 @ 35.70			
								TEM0049 @ 37.20	iHz		
THE PERMIT								TEM0051 @ 38.80			
								TEM0053 @ 40.20			
								TEM0057 @ 43.20			
								TEM0059 @ 44.70	iHz		
000								TEM0061 @ 46.20			
000								TEM0063 @ 47.76			
								TEM0067 @ 50.7GHz			~
								Check al Unch		t even/	2 ~
									ber to be tracked		
								TEM0027 @ 20.7GHz			~
								Mode search:	Auto		$\sim$
								Measure	Stop r	neasurene	nt
							×	Empty	🗹 Sample		

Fabry-Perot Open Resonator

## **Measurement software**

The system allows measuring liquids with the following properties:

- > **dielectric constant**: Dk = 1 5 (accuracy:  $\delta$ Dk < 1%)
- > loss tangent: Df > 10<sup>-4</sup> (maximum achievable accuracy:  $\delta$ Df < 2%)
- thickness: 50µm 650µm (depends on the spacer applied in a liquid container)

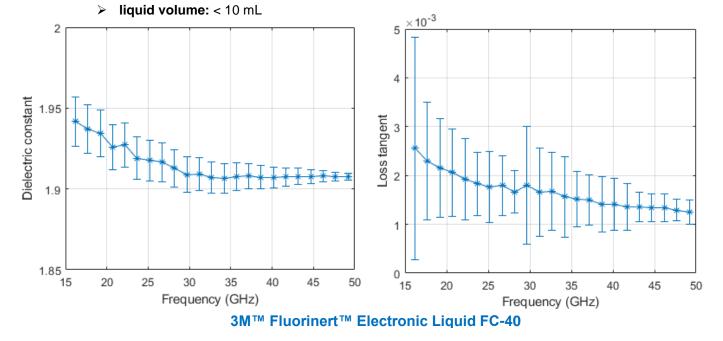

QWED Sp. z o.o. ul. Krzywickiego 12 lok. 1 02-078 Warsaw Poland tel. +48 22 625 73 19 fax: +48 22 621 62 99 www.qwed.eu info@qwed.eu